




## INSTALLATION INSTRUCTIONS

MAKE: Volkswagen  
MODEL: R32 MKV  
YEAR: 2008  
ENGINE: V6-3.2L

**Cat-Back**  
**304 Stainless Steel**  
**49-36408-P**  
**49-36408-B**

**aFe recommends professional installation of our products.**

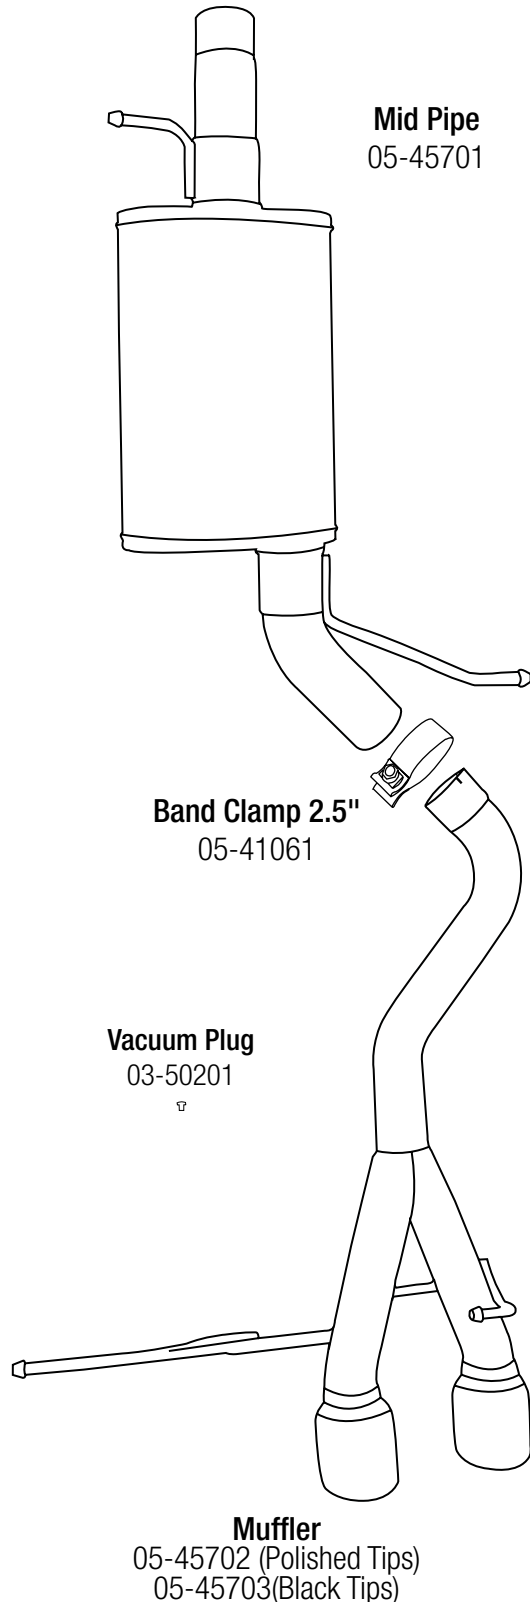

**Caution:** Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

**Step 1:** (Read Instructions prior to installation) Secure vehicle on jack stands (Refer to your manual for specified jack stand positions).

**Step 2:** Remove the vacuum hose off the exhaust valve.

**Step 3:** Loosen the band clamp securing the O.E. mid pipe to the catalytic converter.

**Step 4:** Un-bolt the (x2) rear hanger mount brackets off the chassis.

**Step 5:** Slide the mid pipe off the rubber hanger mounts and remove OE exhaust system.

**Step 6:** Plug the vacuum hose with the supplied aFe plug.

**Step 7:** Slide the aFe Mid Pipe onto the rubber hanger mounts and into the original band clamp from step 3. Do not tighten clamp.

**Step 8:** Remove the hanger mount brackets off the O.E. muffler section and slide onto the aFe Tail Pipe.

**Step 9:** Using (x1) supplied 2.5" aFe band clamp, install the aFe Tail Pipe onto the mid pipe but do not tighten.

**Step 10:** Secure the hanger brackets back onto the chassis using the original bolts removed from step 4 and tighten.

**Step 11:** Align aFe exhaust.

**Step 12:** When satisfied, tighten all band clamps.

**Step 13:** Verify all your work and remove from jack stand.

**Note:** It is normal for the aFe exhaust system to emit smoke for the first few minutes upon initial start-up.