

INSTALLATION INSTRUCTIONS


Exhaust Tip Upgrade

49C36435-B 49C36435-C

49С36435-Н

MAKE: Porsche
MODEL: 911 GT3
YEAR: 2014-2018

ENGINE: H6-3.8L/4.0L

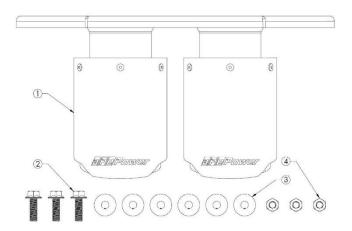

Item	Description	Part Number	Quantity
1	Tip Assembly, Satin Black (49C36435-B)	05-245045B	1
1	Tip Assembly, Carbon Fiber (49C36435-C)	05-245044	1
1	Tip Assembly, Brushed (49C36435-H)	05-245045B	1
2	Bolt, M8 x 1.25 x 25mm	03-50442	3
3	Washer, Flat: 24mm ODxM8 ID	03-50065	6
4	Nut, M8-1.25, All Metal Lock Nut	03-50598	3

aFe POWER recommends professional installation on this product. Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.

- 1. **(Read instructions prior to installation.)** Remove the three nuts securing the OE exhaust tips to the center muffler and remove the factory exhaust tips.
- 2. For Installation on the OE Center Muffler, Slide the aFe power exhaust tips over the studs on the factory exhaust and secure the tips the nuts and washers provided, do not fully tighten.
- 3. For Installation with the aFe POWER 49C36434 Center Muffler Delete, Install the tips with the hardware provided, do not fully tighten.
- 4. Align the tip with the bumper opening and fully tighten all hardware.
- 5. It is recommended to re-tighten all hardware after 50-100 miles.

Page 1 of 1 06-86722

Updated: November 2020